

Bendix® ASA-5® Slack Adjuster Template


1. Block the wheels, mechanically cage the parking brakes and drain all air pressure from the system.
2. Before installing the ASA-5® slack adjuster, read the installation instructions packaged with the service replacement ASA-5® slack adjuster, or the service data sheet SD-05-1269.
3. Remove the existing slack adjuster and yoke.
4. Install the ASA-5® slack adjuster on the brake camshaft.
5. Center the hole "A" on the brake camshaft.
6. Center the ASA-5® slack adjuster yoke pin in the template hole.
7. The full diameter of the ASA-5® slack adjuster link pin must be within the appropriate slot in the template (6" yoke pin to 6" link pin, etc.). If not aligned, adjust the yoke adapter on the actuator rod.

BW1641 © 2009 Bendix Commercial Vehicle Systems LLC 12/2009
 Printed in U.S.A. All rights reserved.

HOLE
A

This template is not needed for the ASA-5® slack adjuster installation. Please refer to the installation instructions included with your product. This template can be used for assistance, if needed.

Please print this template at 100% on cardstock for assistance with the installation of your ASA-5® slack adjuster.

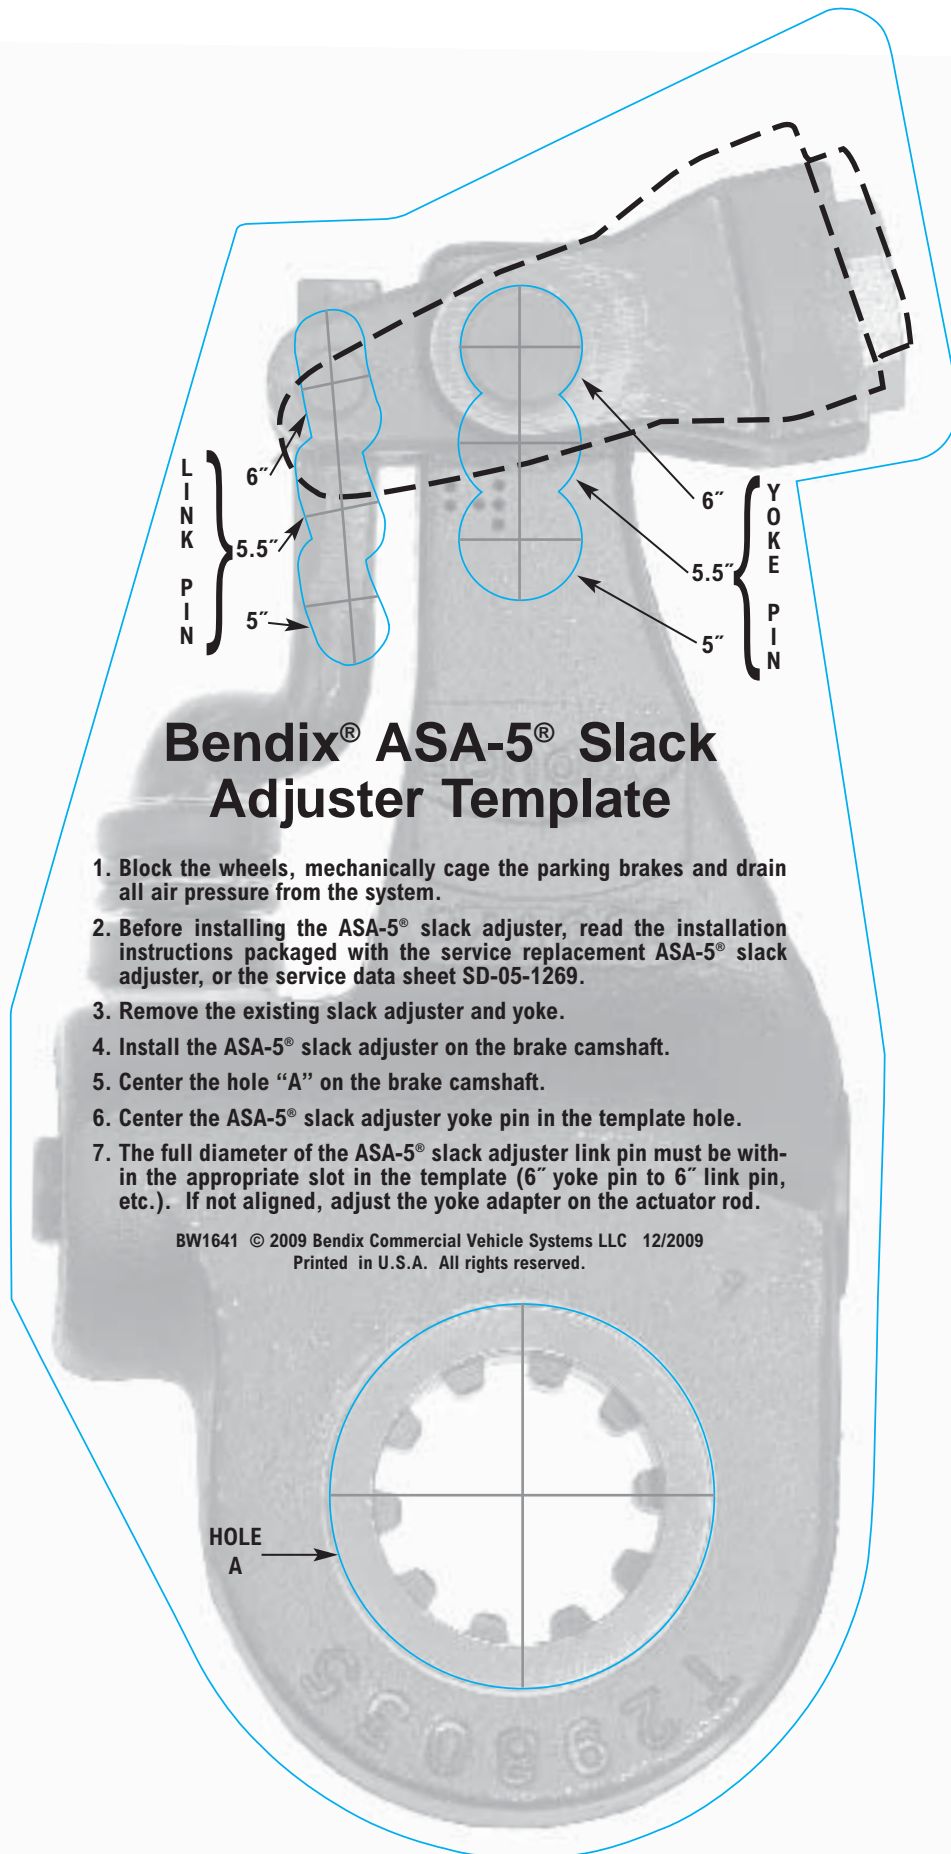

Bendix® ASA-5® Slack Adjuster Template

1. Block the wheels, mechanically cage the parking brakes and drain all air pressure from the system.
2. Before installing the ASA-5® slack adjuster, read the installation instructions packaged with the service replacement ASA-5® slack adjuster, or the service data sheet SD-05-1269.
3. Remove the existing slack adjuster and yoke.
4. Install the ASA-5® slack adjuster on the brake camshaft.
5. Center the hole "A" on the brake camshaft.
6. Center the ASA-5® slack adjuster yoke pin in the template hole.
7. The full diameter of the ASA-5® slack adjuster link pin must be within the appropriate slot in the template (6" yoke pin to 6" link pin, etc.). If not aligned, adjust the yoke adapter on the actuator rod.

BW1641 © 2009 Bendix Commercial Vehicle Systems LLC 12/2009
 Printed in U.S.A. All rights reserved.

HOLE
 A →

This template is not needed for the ASA-5® slack adjuster installation. Please refer to the installation instructions included with your product. This template can be used for assistance, if needed.

Please print this template at 100% on cardstock for assistance with the installation of your ASA-5® slack adjuster.