



Installation Instructions

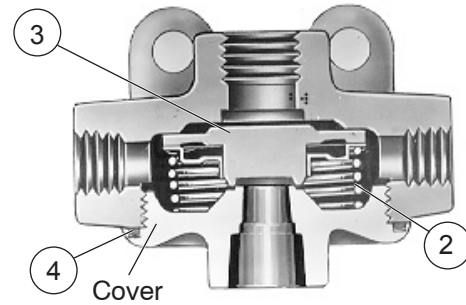

BENDIX® QRV™ QUICK RELEASE VALVE MAINTENANCE KIT

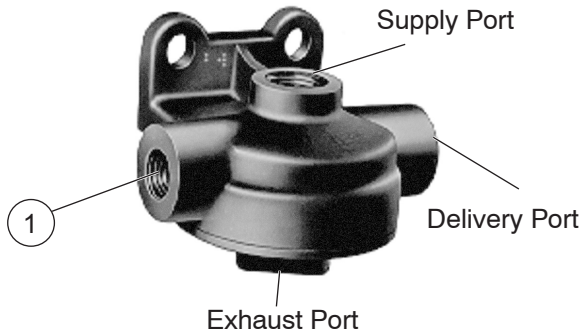

Kit Contents		
Item No.	Description	Qty.
1	Spring Seat	1
2	Spring	1
3	Diaphragm	1
4	Sealing Ring	1



Bendix® QRV™ Quick Release Valve

Figure 1 – Maintenance Kit Contents



GENERAL SAFETY GUIDELINES

WARNING! PLEASE READ AND FOLLOW THESE INSTRUCTIONS

TO AVOID PERSONAL INJURY OR DEATH:

When working on or around a vehicle, the following guidelines should be observed AT ALL TIMES:

- ▲ Park the vehicle on a level surface, apply the parking brakes and always block the wheels. Always wear personal protection equipment.
- ▲ Stop the engine and remove the ignition key when working under or around the vehicle. When working in the engine compartment, the engine should be shut off and the ignition key should be removed. Where circumstances require that the engine be in operation, **EXTREME CAUTION** should be used to prevent personal injury resulting from contact with moving, rotating, leaking, heated or electrically-charged components.
- ▲ Do not attempt to install, remove, disassemble or assemble a component until you have read, and thoroughly understand, the recommended procedures. Use only the proper tools and observe all precautions pertaining to use of those tools.
- ▲ If the work is being performed on the vehicle's air brake system, or any auxiliary pressurized air systems, make certain to drain the air pressure from all reservoirs before beginning ANY work on the vehicle. If the vehicle is equipped with a Bendix® AD-IS® air dryer system, a Bendix® DRM™ dryer reservoir module, or a Bendix® AD-9si® air dryer, be sure to drain the purge reservoir.
- ▲ Following the vehicle manufacturer's recommended procedures, deactivate the electrical system in a manner that safely removes all electrical power from the vehicle.
- ▲ Never exceed manufacturer's recommended pressures.
- ▲ Never connect or disconnect a hose or line containing pressure; it may whip and/or cause hazardous airborne dust and dirt particles. Wear eye protection. Slowly open connections with care, and verify that no pressure is present. Never remove a component or plug unless you are certain all system pressure has been depleted.
- ▲ Use only genuine Bendix® brand replacement parts, components and kits. Replacement hardware, tubing, hose, fittings, wiring, etc. must be of equivalent size, type and strength as original equipment and be designed specifically for such applications and systems.
- ▲ Components with stripped threads or damaged parts should be replaced rather than repaired. Do not attempt repairs requiring machining or welding unless specifically stated and approved by the vehicle and component manufacturer.
- ▲ Prior to returning the vehicle to service, make certain all components and systems are restored to their proper operating condition.
- ▲ For vehicles with Automatic Traction Control (ATC), the ATC function must be disabled (ATC indicator lamp should be ON) prior to performing any vehicle maintenance where one or more wheels on a drive axle are lifted off the ground and moving.
- ▲ The power **MUST** be temporarily disconnected from the radar sensor whenever any tests **USING A DYNAMOMETER** are conducted on a vehicle equipped with a Bendix® Wingman® system.
- ▲ You should consult the vehicle manufacturer's operating and service manuals, and any related literature, in conjunction with the Guidelines above.

REMOVAL

1. Block the vehicle wheels and/or hold the vehicle by means other than the air brakes.
2. Drain all air brake system reservoirs.
3. Identify and disconnect the air lines from the valve.
4. Remove the mounting bolts, then the valve.

DISASSEMBLY

1. Using a wrench on the square portion of the exhaust cover, unscrew the cover from the body.
2. Remove and discard the sealing ring (4) from the cover.
3. Remove and discard the spring (2), diaphragm (3), and spring seat (1).

ASSEMBLY

Prior to assembly, wash the cover and the body in mineral spirits and dry thoroughly.

1. Position the diaphragm (3) in the valve body and install the spring seat (1) over the diaphragm.
2. Install the spring (2) in the valve.
3. Install the sealing ring (4) on the cover and screw the cover into the body. Tighten to 150-400 in-lbs.

INSTALLATION

1. Mount the valve with the exhaust port pointing down then securely tighten the mounting bolts.
2. Connect the air lines to the valve.

OPERATING AND LEAKAGE TEST

While holding a foot brake valve application:

1. Coat exhaust port with soap solution; leakage of a one inch bubble in three seconds is permitted.
2. Coat body and cover with soap solution. No leakage permitted between the body and the cover.



Log-on and Learn from the Best

On-line training that's available when you are —24/7/365.
Visit brake-school.com.