

# Installation Instructions

#### MC-12 TRAILER ANTILOCK ASSEMBLY



## IMPORTANT! PLEASE READ AND FOLLOW THESE INSTRUCTIONS TO AVOID PERSONAL INJURY OR DEATH:

When working on or around a vehicle, the following general precautions should be observed <u>at all times</u>.

- 1. Park the vehicle on a level surface, apply the parking brakes, and always block the wheels.
- 2. Stop the engine when working around the vehicle.
- 3. If the vehicle is equipped with air brakes, make certain to drain the air pressure from all reservoirs before beginning ANY work on the vehicle.
- 4. Following the vehicle manufacturer's recommended procedures, deactivate the electrical system in manner that removes all electrical power from the vehicle.
- 5. When working in the engine compartment the engine should be shut off. Where circumstances require that the engine be in operation, EXTREME CAUTION should be used to prevent personal injury resulting from contact with moving, rotating, leaking, heated, or electrically charged components.

- 6. Never connect or disconnect a hose or line containing pressure; it may whip. Never remove a component or plug unless you are certain all system pressure has been depleted.
- 7. Never exceed recommended pressures and always wear safety glasses.
- 8. Do not attempt to install, remove, disassemble or assemble a component until you have read and thoroughly understand the recommended procedures. Use only the proper tools and observe all precautions pertaining to use of those tools.
- 9. Use only genuine Bendix replacement parts, components, and kits. Replacement hardware, tubing, hose, fittings, etc. should be of equivalent size, type, and strength as original equipment and be designed specifically for such applications and systems.
- Components with stripped threads or damaged parts should be replaced rather than repaired. Repairs requiring machining or welding should not be attempted unless specifically approved and stated by the vehicle or component manufacturer.
- 11. Prior to returning the vehicle to service, make certain all components and systems are restored to their proper operating condition.

#### REMOVAL

- 1. Identify and remove all air lines and fittings connected to the MC-12.
- 2. Disconnect the 14-pin connector by loosening its 1/4 inch screw and pulling the connector from its socket.
- 3. Remove and save the mounting hardware connecting the MC-12 to the vehicle.
- 4. Remove the MC-12 from the vehicle.

#### INSPECTION

Look for any visible damage to the connectors, wiring harnesses, air line fittings and mounting hardware. Repair or replace any damaged components. If a nipple was used to mount the MC-12 to a reservoir, and it needs to be replaced, BE SURE TO USE A SCHEDULE 80 (HEAVY WALL) SHORT COUPLE PIPE NIPPLE.

### INSTALLATION

- 1. Install the air line fittings in the appropriate ports, as identified during "REMOVAL."
- 2. Install mounting hardware (See "INSPECTION").
- 3. Install the MC-12 on the vehicle. Connect air lines to the appropriate fittings, as noted in "REMOVAL."
- 4. Reconnect the 14-pin connector and secure with its hex screw.

#### TEST

Refer to the Bendix Trailer Antilock Troubleshooting Diagram enclosed with the replacement unit.

