



**BENDIX COMMERCIAL VEHICLE SYSTEMS LLC ENCOURAGES SAFE  
DE-POWER AND DISPOSAL PROCESS FOR SPRING BRAKES**

The power spring contained within the emergency section of a spring brake can hold up to 2,800 pounds of force; and if the emergency section clamp band of a double clamp style spring brake is removed, the power spring could uncoil and escape, releasing its force and causing serious personal injury or even death. The sheer force released can result in severe bodily injury, or even loss of life.

In the interest of service technician safety, Bendix does not recommend servicing the emergency section on a double-clamp spring brake.

Bendix further advises that the power spring on any spring brake should be safely de-powered before the disposal of any spring brake chamber. This procedure is to ensure that everyone involved with the disposal of a spring brake is free from the hazards associated with the power spring.

Finally, Bendix also strongly recommends the power spring is properly caged with the use of a steel container specifically designed for this purpose, in order to safely dispose of the unit. One industry-recognized supplier of this type of equipment is listed below. Note: It is the sole responsibility of the user to ensure the container and procedure meets all the requirements for safe spring brake disposal.

*For more information, contact:*

Kevin Romanchok  
Director Actuation  
Bendix Commercial Vehicle Systems LLC  
(440) 329-9359  
kevin.romanchok@bendix.com

or

Tony Fischbach  
Acting Engineering Manager  
Bendix Commercial Vehicle Systems LLC  
(440) 329-9281  
tony.fischbach@bendix.com



**Available from:  
J.S.G. STEEL DESIGN,  
INC.  
1415 County Squire Rd  
Elizabethtown, PA 17022  
Phone: (717) 629-1475**