

Installation Instructions

KIT 5005163

PRESSURE PROTECTION VALVE BOOT REPLACEMENT Contains four replacement boots for the Pressure Protection valves.

DISASSEMBLY (see Figure 1)

Remove original boots by sliding them off the adjusting nuts - making sure not to move the pressure protection nuts.

Cleaning

Clean the exterior of the body.

WARNING:

Do not attempt to adjust or service the Pressure Protection valves. Incorrect pressure protection valve settings can result in automatic application of vehicle spring brakes without prior warning.

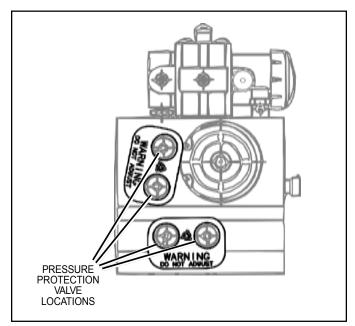


FIGURE 1 - PRESSURE PROTECTION VALVE LOCATIONS

ASSEMBLY

Align the new boots with the adjusting nuts and slide into position. See Warning: Do not attempt to adjust valves.

S-1263 ©2003 Bendix Commercial Vehicle Systems LLC 9/03. All rights reserved. Printed in U.S.A.