



Bendix Versajust Automatic Slack Adjuster (ASA) Installation Template

1. Block the wheels, mechanically cage the parking brake, and drain all air pressure from the air brake system.
2. Before installing the Bendix Versajust automatic slack adjuster, read the Installation Instructions packaged with the service replacement, or the Service Data Sheet SD-05-4630.
3. Remove the existing slack adjuster and yoke.
4. Install the Versajust slack adjuster on the brake camshaft.
5. Center the camshaft on the template hole.
6. Center the Versajust slack's yoke pin in the template hole.
7. The full diameter of the Versajust slack's link pin must be within the appropriate slot in the template. If not aligned, adjust the yoke adapter on the actuator rod.

**For use
with 5 1/2 in.
Bendix
Versajust
Slacks
ONLY.**



CENTER THE CUT-OUT ON THE SPLINE

FOR USE WITH 5 1/2 IN. BENDIX® VERSAJUST® SLACKS ONLY

YOKE PIN

Use the smaller curve as your guide when the head of the pin is on the other side of the slack.

Use the larger curve as your guide when the head of the pin is on this side of the slack.

LINK PIN

Bendix Versajust Automatic Slack Adjuster (ASA) Installation Template

1. Block the wheels, mechanically cage the parking brake, and drain all air pressure from the air brake system.
2. Before installing the Bendix Versajust automatic slack adjuster, read the Installation Instructions packaged with the service replacement, or the Service Data Sheet SD-05-4630.
3. Remove the existing slack adjuster and yoke.
4. Install the Versajust slack adjuster on the brake camshaft.
5. Center the camshaft on the template hole.
6. Center the Versajust slack's yoke pin in the template hole.
7. The full diameter of the Versajust slack's link pin must be within the appropriate slot in the template. If not aligned, adjust the yoke adapter on the actuator rod.



For use with 5 1/2 in. Bendix Versajust Slacks ONLY.

CENTER THE CUT-OUT ON THE SPLINE