




Installation Instructions

BENDIX HOSE ASSEMBLIES


7/16" I.D. 13/16" O.D. BW-348-M HOSE

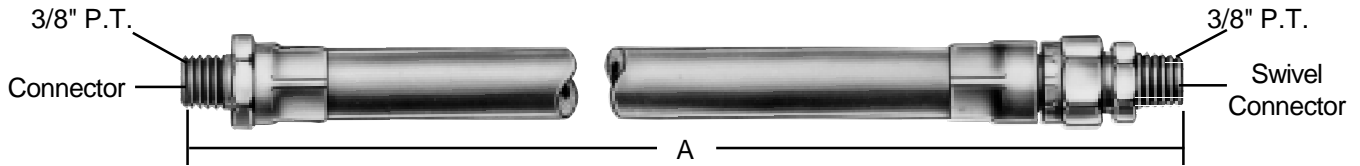

Pc. No.	A	Pc. No.	A	Pc. No.	A	Pc. No.	A
288131	18"	*287389	24"	*288140	32"	288144	40"
*288133	20"	*288137	26"	288141	34"	*288145	42"
288135	22"	*288139	30"	*288142	36"	288147	46"
				288143	38"	288148	48"

*Included in assortment #103874

3/8" I.D. 3/4" O.D. BW-304-M HOSE

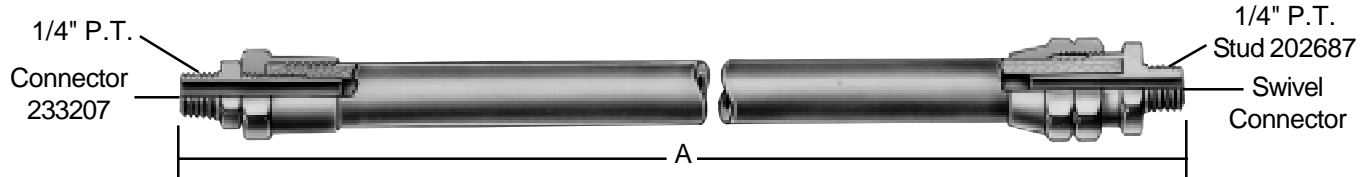

Pc. No.	A	Pc. No.	A	Pc. No.	A
228531	13"	*228547	26"	228557	38"
228533	15"	*228549	29"	228561	42"
228535	18"	228550	30"	228563	45"
*228539	20"	*228552	32"	228565	50"
*228541	22"	228554	34"	228566	54"
*228544	24"	228555	36"	228567	68"

*Included in assortment #103815

IMPORTANT! PLEASE READ AND FOLLOW THESE INSTRUCTIONS TO AVOID PERSONAL INJURY OR DEATH:

When working on or around a vehicle, the following general precautions should be observed at all times.

1. Park the vehicle on a level surface, apply the parking brakes, and always block the wheels.
2. Stop the engine when working around the vehicle.
3. If the vehicle is equipped with air brakes, make certain to drain the air pressure from all reservoirs before beginning ANY work on the vehicle.

4. Following the vehicle manufacturer's recommended procedures, deactivate the electrical system in manner that removes all electrical power from the vehicle.
5. When working in the engine compartment the engine should be shut off. Where circumstances require that the engine be in operation, **EXTREME CAUTION** should be used to prevent personal injury resulting from contact with moving, rotating, leaking, heated, or electrically charged components.
6. Never connect or disconnect a hose or line containing pressure; it may whip. Never remove a component or plug unless you are certain all system pressure has been depleted.

7. **Never exceed recommended pressures and always wear safety glasses.**
 8. **Do not attempt to install, remove, disassemble or assemble a component until you have read and thoroughly understand the recommended procedures. Use only the proper tools and observe all precautions pertaining to use of those tools.**
 9. **Use only genuine Bendix replacement parts, components, and kits. Replacement hardware, tubing, hose, fittings, etc. should be of equivalent size, type, and strength as original equipment and be designed specifically for such applications and systems.**
 10. **Components with stripped threads or damaged parts should be replaced rather than repaired. Repairs requiring machining or welding should not be attempted unless specifically approved and stated by the vehicle or component manufacturer.**
 11. **Prior to returning the vehicle to service, make certain all components and systems are restored to their proper operating condition.**
- Brass Fixed & Swivel Non-Detachable Fittings.
 - Comply with Federal Motor Vehicle Safety Standard 106 as effective March 1, 1975.
 - Refer to Master Catalog for any additional numbers not listed here.
1. Apply part numbered labels BWS 881 appropriately on storage rack
 2. Mount rack securely on wall, end of shelf or parts bin.
 3. Hang hose assemblies appropriately.

