

# Identification Guideline SHEPPARD

## Sheppard™ Steering Gears

RHS0007

Initial Release Date: 7/1/22

Revision Date: 3/15/24

### Identifying Sheppard™ Steering Gears Covered in Field Actions

A potentially defective steering gear can be identified by a serial number and a part number engraved into the steering gear housing. Perform the following procedure to identify the steering gear serial number and part number.

1. Park the vehicle on a flat surface.
2. Set the transmission to park or neutral and set the parking brake.
3. Ensure the vehicle ignition is turned off.
4. Install the wheel chocks.
5. Unlatch and open the hood to access the steering gear.
6. Locate the steering gear serial number and part number. It may be necessary to rotate the pitman arm to view the serial number on the steering gear.

**NOTE:** If the serial number or part number cannot be easily read due to paint application, gently scrape the number(s) with a flathead screwdriver, wire brush, or emery cloth, or apply acetone. Too much intervention may cause the numbers and letters to be illegible.

There are three common styles of engraving locations to be aware of when locating the serial number and part number. **NOTE:** If you need assistance with locating or deciphering the steering gear serial number and/or part number, email [steering22@rh-sheppard.com](mailto:steering22@rh-sheppard.com). Sending a photograph of the steering gear serial number and part number may be helpful.

*Style 1:* This style will have the serial number and part number engraved on one line with a space between the part number and serial number. The entire engraving should be centered on the machined surface. See *Figure 1*.

*Style 2:* This style will also have the serial number and part number engraved on one line with a space between the part number and serial number. The only difference is the amount of machined surface given for the engraving. The numbers should be engraved on more of a curve due to the lack of space provided. See *Figure 2*.

*Style 3:* The serial number and part number should be displayed on one line with a space between the part number and serial number. This style will also have a customer number printed on the housing opposite of the part number and serial number. See *Figure 3*.

7. Record the Vehicle Identification Number (VIN), steering gear serial number, and steering gear part number.
8. Use the URL provided by your vehicle manufacturer to access the Sheppard Steering Gear Classification Tool. This URL is expected to be available after August 1, 2022.

- **Vehicles with a “NOT suspect” steering gear serial number** can be returned to service with no further remedy action required. Sheppard will cover the labor involved in the serial number inspection.
  - **Vehicles with a steering gear serial number identified as “Suspect”** will require removal and replacement. Sheppard will provide a 1:1 replacement gear (that does not contain the defect) manufactured outside the stated dates. Follow the OEM instructions on recording the VIN, serial number, and part number in order to process a claim.
  - **A “Not Found” serial number** indicates circumstances such as a possible character input error by the individual conducting the inspection or some other unique situation. Receipt of a Not Found classification will require you to contact the Sheppard Steering Gear Recall Product Action Center noted at the close of this guideline.
9. Keep a record of all inspected steering gears and their status outcomes. These will be used for the National Highway Traffic Safety Administration (NHTSA) reporting and the claims process.

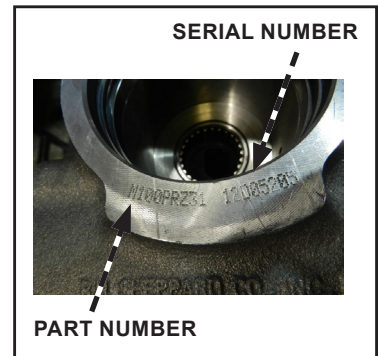


Figure 1 – Style 1

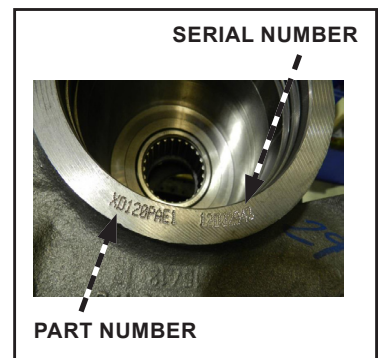


Figure 2 – Style 2

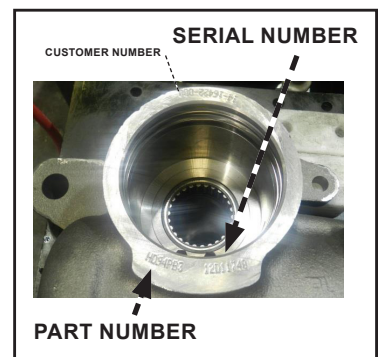


Figure 3 – Style 3

(continued)

**Interpreting the Serial Number and Part Number:**

A serial number and part number are engraved into the steering gear housing. See *Figure 4* for further information on interpreting the serial number and part number.

**SERIAL NUMBER EXAMPLE:**

**21E07957-C**

21 represents the year the steering gear was built.

E indicates the month the steering gear was built (A = January, B = February, C = March, D = April, E = May, etc.).

07957 is the sequential serial number for gears built that month.

-C indicates the steering gear has a snap ring style sector cover with a retainer clip.

**PART NUMBER EXAMPLE:**

**SD110PAU3**

SD stands for "severe duty." The first characters of the part number represent the steering gear family.


110 indicates the diameter of the piston in mm.

3 indicates the steering gear has automatic relief plungers. Other designators are "1" for manual relief plungers and "2" for special applications. An additional number after "3" indicates there is a pitman arm installed on the steering gear.


PAU: The first letter in this sequence will either be "P" to indicate "Power" or "S" to indicate "Slave." "AU" represents the specific model of the M110 steering gear.

**PART NUMBER**



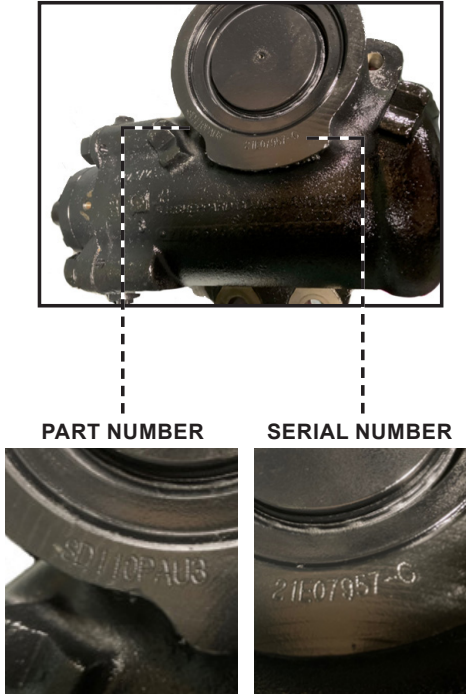
























**SERIAL NUMBER**



**Figure 4 – Serial Number and Part Number Interpretation**

See *Figure 5* for representations of each number (year) and letter (month) for steering gear serial numbers.

ENGRAVED NUMBERS		ENGRAVED LETTERS	
0 	5 	A - JANUARY 	F - JUNE 
1 	6 	B - FEBRUARY 	G - JULY 
2 	7 	C - MARCH 	H - AUGUST 
3 	8 	D - APRIL 	I - SEPTEMBER 
4 	9 	E - MAY 	J - OCTOBER 
			K - NOVEMBER 
			L - DECEMBER 
			P - POWER GEAR 
			R - REMAN. GEAR 
			S - SLAVE GEAR 

**Figure 5 – Engraved Numbers and Letters**

**What You Need To Do:**

An OEM recall notice will be issued for all vehicles with affected steering gears. If a steering gear serial number or part number are not deemed as a suspect number, no further action is required and the vehicle can remain in service. If a steering gear serial number or part number is deemed as a suspect number, the steering gear will need to be replaced. Further action will be advised.

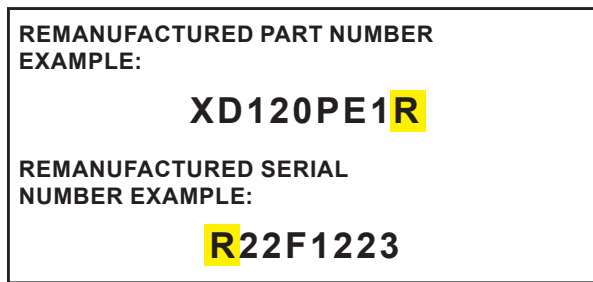


Figure 6 – Remanufactured Steering Gear Part and Serial Number Example

**Replacing a Defective Steering Gear:**

Refer to the vehicle OEM service manual for steering gear replacement instructions. If necessary, refer to *Sheppard Steering Gear Installation, RHS0006*, on [rhsheppard.com](http://rhsheppard.com) for instructions on replacing the steering gear.

**Submitting a Recall Claim:**

This process must be followed to ensure that the claim is reimbursed in full.

- All recall claims are to be filed with the vehicle OEM.
- Claims will be filed using the standard part costs and labor rates provided by the OEM.
- Claims for “Inspection Only” will be paid at the Standard Repair Time (SRT) of 0.3 hours at the shop labor rate.
- The Vehicle Identification Number (VIN) and steering gear serial number are required for all claims (both inspection-only and replacement claims).
- All steering gears that fall within the suspect serial number population and are replaced must be returned directly to R.H. Sheppard.
  - » No pre-authorization or RGA/RMA is required.
  - » Contact PNG Logistics at 877-764-9441 for shipping instructions.
  - » Ship the replaced/defective steering gear to:  
Sheppard Recall  
Attn: (Use the steering gear Serial Number)  
300 N. Forney Ave.  
Hanover, PA 17331
- All claim reimbursements will be paid by Sheppard to the OEM.
- Steering gears returned for the recall with serial numbers that do not fall within the suspect serial number population may result in a denied recall claim.

**Technical Support:**

For support, first refer to the OEM instructions. You may contact Sheppard via email at [steering22@rh-sheppard.com](mailto:steering22@rh-sheppard.com), or telephone the Sheppard Steering Gear Recall Action Line, toll-free, at 1-877-409-9869. Representatives are available to assist you Monday – Friday, 8:00 a.m. – 5:00 p.m. ET. If representatives are unavailable, you will be prompted to leave a voice message.

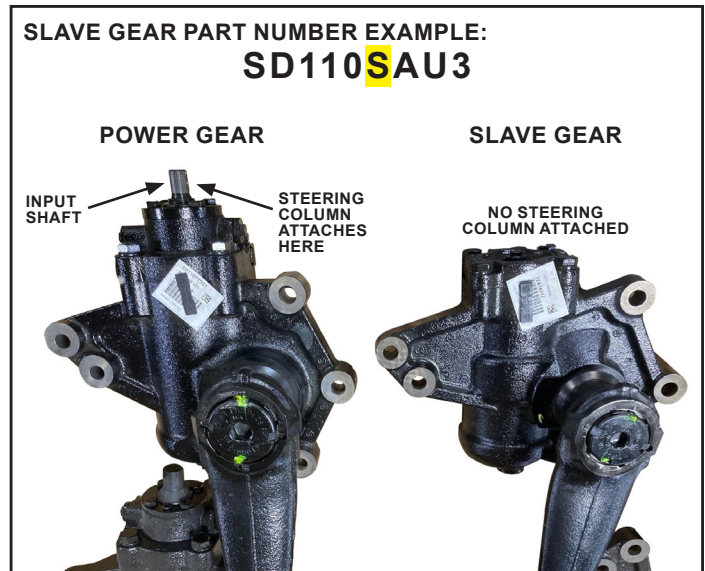


Figure 7 – Slave Gear Part Number and Image Example

